

Category		Title
NFR:	<b>1.B.2.c</b>	<b>Venting and flaring</b>
SNAP:	<b>090203 090206</b>	<b>Flaring in oil refinery Flaring in gas and oil extraction</b>
ISIC:		
Version	<b>Guidebook 2009</b>	

**Coordinator**

Carlo Trozzi

**Contributing authors (including to earlier versions of this chapter)**

Marc Deslauriers, Jeroen Kuenen, Kristin Rypdal and Mike Woodfield

## Contents

1	Overview.....	3
2	Description of sources.....	3
2.1	Process description.....	3
2.2	Techniques .....	4
2.3	Emissions and controls.....	5
3	Methods.....	6
3.1	Choice of method .....	6
3.2	Tier 1 default approach.....	7
3.3	Tier 2 technology-specific approach .....	8
3.4	Tier 3 emission modelling and use of facility data.....	10
4	Data quality .....	14
5	Glossary .....	14
6	References.....	14
7	Point of enquiry.....	15

## 1 Overview

This chapter treats emissions from venting and flaring in the extraction and refining of oil and gas. Flaring is basically combustion of gas, but without utilisation of the energy that is released. Included are flaring during extraction and first treatment of both gaseous and liquid fossil fuels and flaring in oil refineries. Also, this chapter includes emissions from incineration after a well testing.

Flaring emissions from the extraction of gas and oil are an important source of emissions for countries that produce oil and gas. Pollutants emitted are NO<sub>x</sub> and non-methane volatile organic compounds (NMVOC), but also SO<sub>x</sub>, CO and particulates may be emitted.

## 2 Description of sources

### 2.1 Process description

#### 2.1.1 Gas and oil extraction

Gas is flared on oil- and gas-production installations for safety. The main reasons are lack of process or transport capacity for gas, a continuous surplus gas flow, start up, maintenance and emergency (need for pressure relief). The gas is led through a pipeline to a flare tip located high above and away from the platform.

Well testing is performed as a part of the exploration activity. After a discovery, the well is tested to check the production capacity and the composition of the reservoir fluid. Due to lack of treatment, storage and transport facilities, the oil or gas extracted may be disposed by burning.

#### 2.1.2 Oil refining

Blowdown systems are used at petroleum refineries (see Chapter 1.B.2.a.iv Refining/storage) to collect and separate both liquid and vapour discharges from various refinery process units and equipment (US Environmental Protection Agency (US EPA), 1985, US EPA, 1992). The gaseous fraction, that may represent a planned or unplanned hydrocarbon discharge, may be either recycled or flared. Flaring provides a widely-used safety mechanism and emission control option for blowdown systems when the heating value of the emission stream cannot be recovered due to uncertain or intermittent releases during process upsets/emergencies. Non-condensed vapours from the blowdown system may be combusted in a flare which is designed to handle large fluctuations of both the flow rate and hydrocarbon content of the discharge. Alternatively, thermal oxidisers are used for destroying gas streams that contain more corrosive halogenated or sulphur-bearing components.

Although different types of flares exist, the steam-assisted elevated flare systems are most commonly used at petroleum refineries whereby steam is injected in the combustion zone of the flare to provide turbulence and inject air to the flame. For waste gases of insufficient heating value, auxiliary fuels may also be used to sustain combustion. Ground-level enclosed flares (oxidisers) are used for the destruction of gaseous streams with relatively low volume flows compared to elevated flare designs.

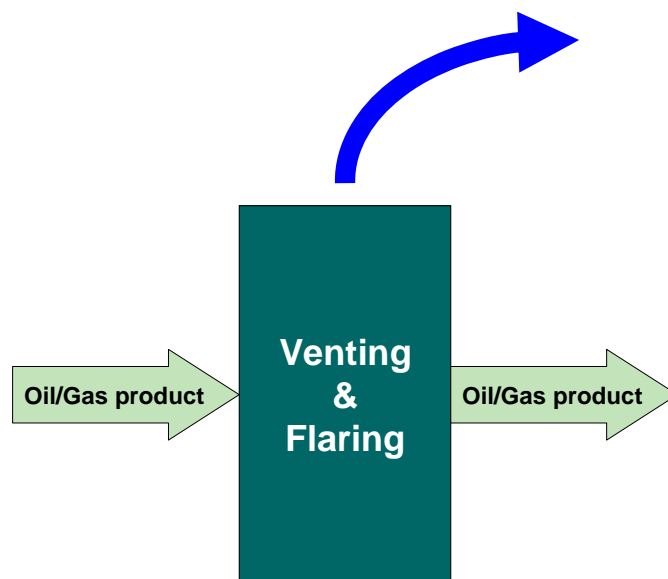


Figure 2-1 Process scheme for source category 1.B.2.c Venting and Flaring

## 2.2 Techniques

### 2.2.1 Gas and oil extraction

The combustion in the flare will depend on the gas composition, gas velocity (efficiency of the flare) and wind conditions. There are several types of flare burners which may also give different emissions. The design of the flare is determined primarily by the safety considerations.

### 2.2.2 Oil refining

#### 2.2.2.1 Elevated open flares

Steam-assisted elevated flares are installed at a sufficient height above the plant and located at appropriate distances from other refinery facilities. The flare generally comprises a refractory flame platform with a windshield, steam nozzles, auxiliary gas/air injectors and a pilot burner mounted upon a stack containing a gas barrier. As reported (US EPA, 1985, US EPA, 1992, MacDonald, 1990), the flare combustion efficiency typically exceeds 98 % with dependence on the following factors (i.e. for efficient performance):

- excess steam assist (i.e. steam/fuel gas ratio less than 2);
- sufficient gas heating value (i.e. greater than 10 MJ/m<sup>3</sup>);
- low wind speed conditions (i.e. above 10 m/sec.);
- sufficient gas exit velocity (i.e. above 10 m/sec.).

Similarly, different types of flare burners, designed primarily for safety requirements, may result in different efficiencies.

#### 2.2.2.2 Enclosed flares

In an enclosed flare the flame is contained within a refractory-lined combustion chamber, which is installed at ground level. The containment of the flare effectively eliminates the visible flame and

thermal radiation and significantly reduces noise levels. This permits the installation of this type of flare much closer to process units than elevated flares.

Burners can be designed to produce smokeless combustion by using assist air, steam or gas. Alternatively, special designs of burner permit efficient combustion without the need of assist services.

## **2.3 Emissions and controls**

### **2.3.1 Gas and oil extraction**

The emissions of pollutants from flaring are either unburned fuel or by-products of the combustion process. Different burner designs may influence the characteristic of the emissions. Increased efficiency of combustion may reduce the CH<sub>4</sub> and NMVOC emissions. However, this might not reduce the NO<sub>x</sub> emissions and will not reduce the CO<sub>2</sub> emissions. Major emissions from flaring are best reduced by reducing the amount of flared gas, without increasing the amount of gas directly vented.

Currently all flaring cannot be eliminated, but there is potential for substantially reducing the amount flared and technologies are now tested to reduce flaring further. Possibilities are:

- high integrity pressure protection systems (HIPS): gas leakages are collected and brought back to the process system. The flare is only ignited when really necessary.;
- use of nitrogen as a purge gas (to avoid explosions (blanking) and deoxygenating of water (stripping));
- alternative methods for glycol regeneration;
- re-injection of gas into gas reservoirs;
- increased possibilities for transport and storage capacity of gas;
- reduced requirements for a pilot flame.

### **2.3.2 Oil refining**

Depending on the waste gas composition and other factors, the emissions of pollutants from flaring may consist of unburned fuel components (e.g. methane, NMVOC), by-products of the combustion process (e.g. soot, partially combusted products, CO, CO<sub>2</sub>, NO<sub>x</sub>) and sulphur oxides (e.g. SO<sub>2</sub>) where sulphur components are present in the waste gas. Steam injection is used to enhance combustion for smokeless burning and to reduce NO<sub>x</sub> by lowering the flame temperature. Increased combustion efficiency may reduce CH<sub>4</sub> and NMVOC, but will not reduce CO<sub>2</sub> emissions. Flaring emissions might best be reduced by minimising amounts of gases to be flared, provided that the associated wastes gases are not vented directly.

## 3 Methods

### 3.1 Choice of method

Figure 3-1 presents the procedure to select the methods for estimating emissions from venting and flaring. The basic idea is:

- if detailed information is available, use it;
- if the source category is a key category, a Tier 2 or better method must be applied and detailed input data must be collected. The decision tree directs the user in such cases to the Tier 2 method, since it is expected that it is more easy to obtain the necessary input data for this approach than to collect facility level data needed for a Tier 3 estimate;
- the alternative of applying a Tier 3 method, using detailed process modelling, is not explicitly included in this decision tree. However, detailed modelling will always be done at facility level and results of such modelling could be seen as ‘facility data’ in the decision tree.

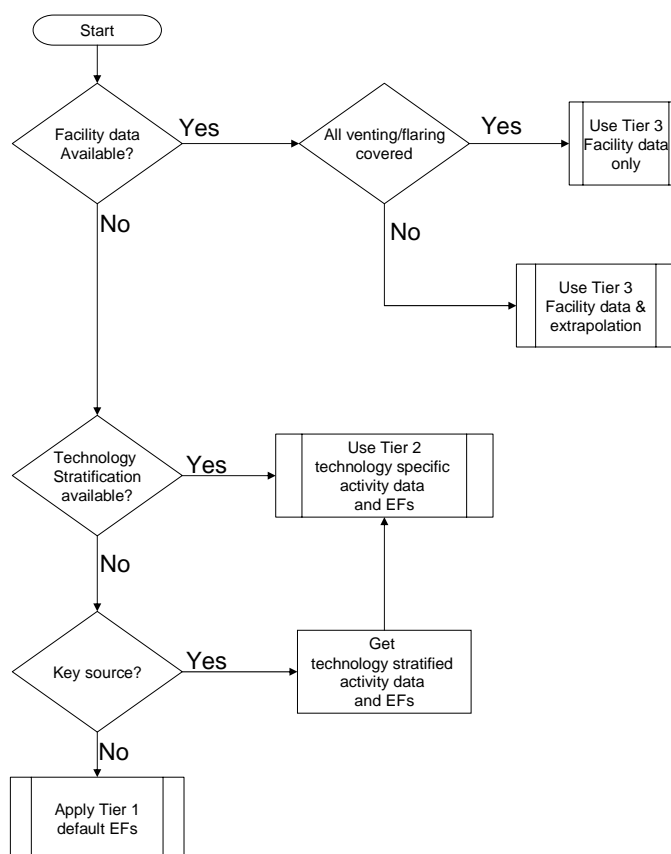


Figure 3-1 Decision tree for source category 1.B.2.c Venting and Flaring

## 3.2 Tier 1 default approach

### 3.2.1 Algorithm

The Tier 1 approach for venting and flaring uses the general equation:

$$E_{\text{pollutant}} = AR_{\text{production}} \times EF_{\text{pollutant}} \quad (1)$$

This equation is applied at the national level, using annual totals for venting and flaring.

The Tier 1 emission factors assume an averaged or typical technology and abatement implementation in the country and integrate all different sub-processes within the source category.

In cases where specific abatement options are to be taken into account, a Tier 1 method is not applicable and a Tier 2 or Tier 3 approach must be used.

### 3.2.2 Default emission factors

#### 3.2.2.1 Flaring in oil and gas extraction

Table 3-1 provides the default emission factors for venting and flaring in oil and gas extraction. These emission factors are for flaring in extraction of gas and oil from OLF (1993) for Norway and are based on documented measurements. More measurements of emissions from flares are needed to establish a more accurate set of emission factors. The emission factor for NMVOC is lower than in other studies/countries, because measurements have shown that unburned hydrocarbons are combusted while leaving the flare.

It may generally be assumed that fields with a high level of flaring have a more efficient flare.

The emission factors are expressed in g/Nm<sup>3</sup>, where Nm<sup>3</sup> refers to 1 m<sup>3</sup> at standard conditions: T = 288.15 K (15 °C) and p = 1 atm. (or 1.01325 bar).

**Table 3-1 Tier 1 emission factors for source category 1.B.2.c Venting and flaring, Flaring in oil and gas extraction**

Tier 1 default emission factors					
	Code	Name			
<b>NFR Source Category</b>	1.B.2.c	Venting and flaring			
<b>Fuel</b>	NA				
<b>Not applicable</b>	Aldrin, Chlordane, Chlordecone, Dieldrin, Endrin, Heptachlor, Heptabromo-biphenyl, Mirex, Toxaphene, HCH, DDT, PCB, HCB, PCP, SCCP				
<b>Not estimated</b>	SOx, NH3, TSP, PM10, PM2.5, Pb, Cd, Hg, As, Cr, Cu, Ni, Se, Zn, PCDD/F, Benzo(a)pyrene, Benzo(b)fluoranthene, Benzo(k)fluoranthene, Indeno(1,2,3-cd)pyrene, Total 4 PAHs				
Pollutant	Value	Unit	95% confidence interval		Reference
			Lower	Upper	
NOx	12	g/Nm3 gas	6	20	OLF (1993)
CO	1	g/Nm3 gas	0.5	2	OLF (1993)
NMVOC	0.1	g/Nm3 gas	0.05	0.2	OLF (1993)

### 3.2.2.2 Flaring in oil refineries

The table below provides the default emission factors for flaring in oil refineries. The factors are taken from ConcaWE (2007). Emissions from particulates are assumed to be negligible and are reported in the table below as ‘not estimated’.

**Table 3-2 Tier 1 emission factors for source category 1.B.2.c Venting and flaring, Flaring in oil refineries**

Tier 1 default emission factors					
	Code	Name			
<b>NFR Source Category</b>	1.B.2.c	Venting and flaring			
<b>Fuel</b>	NA				
<b>Not applicable</b>	Aldrin, Chlordane, Chlordecone, Dieldrin, Endrin, Heptachlor, Heptabromo-biphenyl, Mirex, Toxaphene, HCH, DDT, PCB, HCB, PCP, SCCP				
<b>Not estimated</b>	NH <sub>3</sub> , TSP, PM <sub>10</sub> , PM <sub>2.5</sub> , Pb, Cd, Hg, As, Cr, Cu, Ni, Se, Zn, PCDD/F, Benzo(a)pyrene, Benzo(b)fluoranthene, Benzo(k)fluoranthene, Indeno(1,2,3-cd)pyrene, Total 4 PAHs				
Pollutant	Value	Unit	95% confidence interval		Reference
			Lower	Upper	
NO <sub>x</sub>	54	g/m <sup>3</sup> refinery feed	20	200	CONCAWE (2007)
CO	12	g/m <sup>3</sup> refinery feed	4	40	CONCAWE (2007)
NM <sub>VOC</sub>	2	g/m <sup>3</sup> refinery feed	1	6	CONCAWE (2007)
SO <sub>x</sub>	77	g/m <sup>3</sup> refinery feed	30	200	CONCAWE (2007)

### 3.2.3 Activity data

#### 3.2.3.1 Oil and gas extraction

The volume of gas flared is the most relevant activity statistics. The volume of flare gas may be measured instrumentally or calculated. In Norway, about 70 % of the platforms have metering systems, but this fraction is probably lower in most other countries. The uncertainty may be as high as 5–30 % if the gas is metered. A mass balance approach may be equally accurate.

#### 3.2.3.2 Oil refineries

To apply the Tier 1 default emission factors, the annual total throughput of each refinery is required, which can be obtained from Eurostat.

## 3.3 Tier 2 technology-specific approach

### 3.3.1 Algorithm

The Tier 2 approach is similar to the Tier 1 approach. To apply the Tier 2 approach, both the activity data and the emission factors need to be stratified according to the different techniques that may occur in the country. In the venting and flaring sector, these are refinery flares and well testing.

The approach followed to apply a Tier 2 approach is as follows.

Stratify the venting and flaring in the country to model the different product and process types occurring into the inventory by:

- defining the production using each of the separate product and/or process types (together called ‘technologies’ in the formulae below) separately, and



- applying technology-specific emission factors for each process type:

$$E_{\text{pollutant}} = \sum_{\text{technologies}} AR_{\text{production,technology}} \times EF_{\text{technology,pollutant}} \quad (2)$$

where:

$AR_{\text{production,technology}}$  = the production rate within the source category, for the specific technology,

$EF_{\text{technology,pollutant}}$  = the emission factor for this technology and this pollutant.

A country where only one technology is implemented will result in a penetration factor of 100 % and the algorithm reduces to:

$$E_{\text{pollutant}} = AR_{\text{production}} \times EF_{\text{technology,pollutant}} \quad (3)$$

where:

$E_{\text{pollutant}}$  = the emission of the specified pollutant,

$AR_{\text{production}}$  = the activity rate within this source category,

$EF_{\text{pollutant}}$  = the emission factor for this pollutant.

### 3.3.2 Technology-specific emission factors

This section presents the Tier 2 emission factors for venting and flaring.

#### 3.3.2.1 Well testing

The table below presents the emission factors for well testing. These are applicable for Norway and taken from OLF (1993). A factor is provided for emissions of VOC (3 kg/Mg oil burned), but this VOC is considered to consist mainly of methane. Therefore, NMVOC is reported as 'not estimated' here.

**Table 3-3 Tier 2 emission factors for source category 1.B.2.c Venting and flaring, Well testing**

Tier 2 emission factors					
	Code	Name			
<b>NFR Source Category</b>	1.B.2.c	Venting and flaring			
<b>Fuel</b>	NA				
<b>SNAP (if applicable)</b>	090206	Flaring in gas and oil extraction			
<b>Technologies/Practices</b>	Well testing				
<b>Region or regional conditions</b>	Norway				
<b>Abatement technologies</b>					
<b>Not applicable</b>	Aldrin, Chlordane, Chlordecone, Dieldrin, Endrin, Heptachlor, Heptabromo-biphenyl, Mirex, Toxaphene, HCH, DDT, PCB, HCB, PCP, SCCP				
<b>Not estimated</b>	NMVOC, SO <sub>x</sub> , NH <sub>3</sub> , TSP, PM <sub>10</sub> , PM <sub>2.5</sub> , Pb, Cd, Hg, As, Cr, Cu, Ni, Se, Zn, PCDD/F, Benzo(a)pyrene, Benzo(b)fluoranthene, Benzo(k)fluoranthene, Indeno(1,2,3-cd)pyrene, Total 4 PAHs				
Pollutant	Value	Unit	95% confidence interval		Reference
			Lower	Upper	
NO <sub>x</sub>	3.7	kg/Mg oil burned	1	10	OLF (1993)
CO	18	kg/Mg oil burned	6	50	OLF (1993)

### 3.3.2.2 Flaring in oil refineries

Table 3-4 provides the Tier 2 emission factors for flaring in oil refineries. The factors are taken from ConcaWE (2007) and identical to the emission factors for flaring in oil refineries as given in Tier 1.

**Table 3-4 Tier 2 emission factors for source category 1.B.2.c Venting and flaring, Flaring in oil refineries**

Tier 2 emission factors					
Code		Name			
NFR Source Category	1.B.2.c	Venting and flaring			
Fuel	NA				
SNAP (if applicable)	090203	Flaring in oil refinery			
Technologies/Practices					
Region or regional conditions					
Abatement technologies	uncontrolled				
Not applicable	Aldrin, Chlordane, Chlordecone, Dieldrin, Endrin, Heptachlor, Heptabromo-biphenyl, Mirex, Toxaphene, HCH, DDT, PCB, HCB, PCP, SCCP				
Not estimated	NH <sub>3</sub> , TSP, PM <sub>10</sub> , PM <sub>2.5</sub> , Pb, Cd, Hg, As, Cr, Cu, Ni, Se, Zn, PCDD/F, Benzo(a)pyrene, Benzo(b)fluoranthene, Benzo(k)fluoranthene, Indeno(1,2,3-cd)pyrene, Total 4 PAHs				
Pollutant	Value	Unit	95% confidence interval		Reference
			Lower	Upper	
NO <sub>x</sub>	54	g/m <sup>3</sup> refinery feed	20	200	CONCAWE (2007)
CO	12	g/m <sup>3</sup> refinery feed	0	40	CONCAWE (2007)
NM VOC	2	g/m <sup>3</sup> refinery feed	1	6	CONCAWE (2007)
SO <sub>x</sub>	77	g/m <sup>3</sup> refinery feed	30	200	CONCAWE (2007)

### 3.3.3 Abatement

A number of add-on technologies exist that are aimed at reducing the emissions of specific pollutants. The resulting emission can be calculated by replacing the technology-specific emission factor with an abated emission factor as given in the formula:

$$EF_{technology,abated} = (1 - \eta_{abatement}) \times EF_{technology,unabated} \quad (4)$$

No abatement efficiencies are available for add-on technologies within this source category.

### 3.3.4 Activity data

For well testing, the amount of oil burned is the relevant activity statistics.

For refinery flares, the annual total throughput of each refinery is required.

## 3.4 Tier 3 emission modelling and use of facility data

### 3.4.1 Algorithm

A Tier 3 emission estimate for this source category would involve process modelling. Process modelling involves making separate estimates for each process taking account of abatement systems installed.

A few emission estimation models are discussed in this chapter.

### 3.4.2 Tier 3 emission modelling and use of facility data

#### 3.4.2.1 Venting in oil and gas extraction

For NO<sub>x</sub>, the flare may be classified according to its flow rate. The lower the flow rate the lower the NO<sub>x</sub> emission factor. The following equation may be used if better data are not available.

$$g \text{ NO}_x/\text{Nm}^3 = X + 20, \quad (5)$$

where X is the gas flow rate in terms of million m<sup>3</sup>/day (Celius 1992).

For NMVOC, CH<sub>4</sub> and CO the emissions will be dependent on the load, and subsequently the efficiency of the flare, although no data are available. It may be assumed that the emissions of these compounds run against the NO<sub>x</sub> trend.

#### 3.4.2.2 Refinery flares

The table below presents emission factors for estimating emissions from elevated open flares. Table 3-6 presents emission factors for enclosed flares/thermal oxidisers. These emission factors are taken from Concauwe (2007). The emissions from combustion of the flared gas are treated in this chapter.

To estimate emissions from the combustion of the pilot gas fuel used to initiate flare combustion or the assist fuel required to sustain combustion, it is good practice to use the combustion emission factors provided in Chapter 1.A.1 'Combustion in energy industries' relevant for NFR code 1.A.1.b Petroleum refining.

**Table 3-5 Tier 3 emission factors for source category 1.B.2.c Venting and flaring, Elevated flaring in oil refinery**

Tier 3 emission factors					
NFR Source Category	Code	Name			
	1.B.2.c	Venting and flaring			
Fuel	NA				
SNAP (if applicable)	090203	Flaring in oil refinery			
Technologies/Practices	Elevated open flares				
Region or regional conditions					
Abatement technologies	uncontrolled				
Not applicable	Aldrin, Chlordane, Chlordecone, Dieldrin, Endrin, Heptachlor, Heptabromo-biphenyl, Mirex, Toxaphene, HCH, DDT, PCB, HCB, PCP, SCCP				
Not estimated	NH <sub>3</sub> , TSP, PM <sub>10</sub> , PM <sub>2.5</sub> , Pb, Cd, Hg, As, Cr, Cu, Ni, Se, Zn, PCDD/F, Benzo(a)pyrene, Benzo(b)fluoranthene, Benzo(k)fluoranthene, Indeno(1,2,3-cd)pyrene, Total 4 PAHs				
Pollutant	Value	Unit	95% confidence interval		Reference
			Lower	Upper	
NO <sub>x</sub>	32.2	g/GJ	10	100	CONCAWE (2007)
CO	177	g/GJ	60	500	CONCAWE (2007)
NMVOC	0.005	g/(g of NMVOC in gas)	0.003	0.01	CONCAWE (2007)
SO <sub>x</sub>	2	g/(g of S in gas flared)	1.6	2.4	CONCAWE (2007)

Note

Annual emissions of PM<sub>10</sub> from flaring in oil refineries assumed to be negligible. However, since an emission is estimated to be reported for PM emissions from venting and flaring, it is listed here as 'not estimated'.

**Table 3-6 Tier 3 emission factors for source category 1.B.2.c Venting and flaring, Enclosed flaring in oil refinery**

Tier 3 emission factors					
NFR Source Category	Code	Name			
	1.B.2.c	Venting and flaring			
Fuel	NA				
SNAP (if applicable)	090203	Flaring in oil refinery			
Technologies/Practices	Refinery ground-level enclosed flare or thermal oxidiser				
Region or regional conditions					
Abatement technologies	uncontrolled				
Not applicable	Aldrin, Chlordane, Chlordecone, Dieldrin, Endrin, Heptachlor, Heptabromo-biphenyl, Mirex, Toxaphene, HCH, DDT, PCB, HCB, PCP, SCCP				
Not estimated	NH <sub>3</sub> , TSP, PM <sub>2.5</sub> , Se, PCDD/F, Benzo(a)pyrene, Benzo(b)fluoranthene, Benzo(k)fluoranthene, Indeno(1,2,3-cd)pyrene, Total 4 PAHs				
Pollutant	Value	Unit	95% confidence interval		Reference
			Lower	Upper	
NO <sub>x</sub>	30	g/GJ	10	100	CONCAWE (2007)
CO	40	g/GJ	10	100	CONCAWE (2007)
NMVOC	2.6	g/GJ	1	10	CONCAWE (2007)
SO <sub>x</sub>	2	g/(g of S in gas flared)	1.6	2.4	CONCAWE (2007)
PM <sub>10</sub>	0.89	g/GJ	0.3	3	CONCAWE (2007)
Pb	2	mg/GJ	1	6	CONCAWE (2007)
Cd	0.7	mg/GJ	0.2	2	CONCAWE (2007)
Hg	0.09	mg/GJ	0.03	0.6	CONCAWE (2007)
As	0.3	mg/GJ	0.1	1	CONCAWE (2007)
Cr	3	mg/GJ	1	10	CONCAWE (2007)
Cu	2	mg/GJ	1	6	CONCAWE (2007)
Ni	4	mg/GJ	1	10	CONCAWE (2007)
Zn	26	mg/GJ	10	80	CONCAWE (2007)

### 3.4.2.3 Venting at oil and gas production facilities

#### *Combined oil and gas facilities*

The following tables list the emission factors for venting per facility and per million Nm<sup>3</sup> of gas produced.

**Table 3-7 Suggested emission factors for venting (kg/million Nm<sup>3</sup> gas produced) (OLF 1993)**

	NMVOC	CH <sub>4</sub>	CO <sub>2</sub>	Quality codes
Norway	76	98	0	C

**Table 3-8 Suggested emission factors for venting (Mg per facility) (OLF, 1993, UKOOA 1995)**

	NMVOC	CH <sub>4</sub>	CO <sub>2</sub>	Quality codes
Norway	30	20	0	C
UK	550	660	70	C

Generally, the venting will be higher on older platforms than on newer platforms. The main reasons for the difference are recent platforms have employed the use of low pressure systems, more recovery of hydrocarbon gases, use of electric start turbines rather than gas driven and moving away from the practice of venting. If better data is not available, it is good practice to apply the highest suggested emission factor.

*Facilities producing gas only***Table 3-9 Suggested emission factors for venting (Brown et al. 1993, Picard et al. 1992, SRI 1994)**

	NMVOC	CH <sub>4</sub>	CO <sub>2</sub>	Unit	Quality
UK	61	498	25	Mg/facility	C
Canada	0.19	0.33		Mg/Gg gas	C
Russia	1.4–2.1 *			Mg/Gg gas	C
Netherlands	0.6	6.7	0.2	Mg/Gg gas	C

Note

\* Total VOC. Vent and fugitive losses.

*Facilities producing oil only***Table 3-10 Suggested emission factors for venting (Brown et al. 1993, Picard et al. 1992, SRI 1994)**

	NMVOC	CH <sub>4</sub>	CO <sub>2</sub>	Unit	Quality
UK	300	270	240	Mg/facility	C
Canada	0.24	0.44		Mg/Gg oil	C
Russia	2.6			Mg/Gg oil	C
Netherlands	0.9	9.3	0.3	Mg/Gg oil	C

*Gas Terminals***Table 3-11 Suggested emission factors for venting (Gg/terminal) (Brown et al. 1993, Picard et al. 1992, SRI 1994)**

	NMVOC	CH <sub>4</sub>	CO <sub>2</sub>	Throughput	Quality
UK	0.28	2.4	0.034	-	C
Canada	0.007	0.013	-	-	C
Norway	0	0	0	25 billion Nm <sup>3</sup>	C
Russia	5–12 *			22 billion Nm <sup>3</sup>	C

Note

\* Including fugitive losses and methane.

**3.4.3 Activity data****3.4.3.1 Oil and gas extraction**

For the process model described in the previous section, the total daily gas flow rate (m<sup>3</sup>/day) is required.

**3.4.3.2 Refineries**

As the gaseous streams destructed in flares may be of very variable composition, it is necessary to know the stream composition to determine the net calorific value and the mass concentration of benzene, NMVOC and sulphur.

### 3.4.3.3 Oil and gas production

The relevant activity data is the total amount of oil or gas produced. Some factors are also given in mass emitted per terminal or facility; for these the total number of facilities in a country is the relevant activity statistics.

## 4 Data quality

No specific issues

## 5 Glossary

Nm <sup>3</sup>	m <sup>3</sup> under 'normal' circumstances: p=1 bar and T=273.15 K
-----------------	---

## 6 References

Brown and Root (1993). 'Environmental atmospheric emissions from UK oil and gas exploration and production facilities in the continental shelf area'. United Kingdom Offshore Association Limited.

CONCAWE (2007). 'Air pollutant emission estimation methods for E-PRTR reporting by refineries'. Prepared by the Concaawe Air Quality Management Group's Special Task Force on Emission Reporting Methodologies (STF-69), L. Post (technical coordinator). Report No 3/07, Brussels, April 2007.

MacDonald R.J. (1990). 'Industrial flare efficiency', University of Waterloo. Report prepared for the Industrial Program Branch, Environment Canada.

OLF (1993). The Norwegian Oil Industry Association Environmental Programme, Phase II: Summary report.

Picard D.J., Ross B.D., Koon D.W.H. (1992). 'A detailed inventory of CH<sub>4</sub> and VOC emissions from upstream oil and gas operations in Alberta', Clearstone Engineering Ltd.

SRI (Scientific Research Institute of Atmospheric Air Protection) (1994). 'Emissions of hydrocarbons in gas industry, oil production industry, gas- and oil refining industries of Russia'. *SRI Atmosphere*. Report, St. Petersburg.

UKOOA (1995). United Kingdom Offshore Operators Association Limited, Guidelines on atmospheric emissions inventory. Issue No 1, July 1995.

US EPA (1985). United States Environmental Protection Agency, Compilation of air pollutant emission factors, AP-42 fourth edition and supplements. Environmental Protection Agency, Research Triangle Park, North Carolina.

US EPA (1992). United States Environmental Protection Agency, Air Pollutant Engineering Manual, Ed. Anthony J. Buonicore and Wayne Davis. Air and Waste Management Association TD889.A39. Van Nostrand Reinhold, New York.

## **7 Point of enquiry**

Enquiries concerning this chapter should be directed to the relevant leader(s) of the Task Force on Emission Inventories and Projection's expert panel on combustion and industry. Please refer to the TFEIP website ([www.tfeip-secretariat.org/](http://www.tfeip-secretariat.org/)) for the contact details of the current expert panel leaders.